
INDEX

Numerics

- 15/15XT 5
- 15K Air/Oil Spindle Installation 293
 - Install Component Plumbing 297
 - Plumbing Spindle 296
 - Wiring Harness Installation 295
- 2016L 12
- 2216 8
- 3016 10
- 3016L 14
- 3020 26
- 4020 16
- 4020A 18
- 4525 28
- 50 Taper Dual Arm Tool Changer 151
 - Alignment 163
 - Arm Installation 161
 - Inserting the Arm Assembly 162
 - Installation 156
 - Installation Notice 157
 - Maintenance 161
 - Sending the Tool Changer Spindle to Home Position 161
 - Sub-Assemblies 152
 - Tool Changer Specifications 151
 - Troubleshooting 158
- 5020A 20
- 6030 22
- 6535 30
- 8030 24

A

- Air Positive Flow System 287
- Air Supply 45
- Alternate Service 50
- ATC Motor Replacement Procedure 120
 - Pulley Alignment 122
 - Replacing the Slide Motor 121
 - Replacing the Turret Motor on a Geneva Wheel ATC 120

- Replacing the Turret Motor on a Servo Turret ATC 121
- Turret Factor Setting 122
- Attached Optional Devices 325
 - Access from Program Using Macro Statement #DISK 339
 - Macro Statement Format 339
 - Restrictions on File Content and Format 339
 - Restrictions on User Defined Subroutines 340
 - Subprograms and Fixed Subroutines ARE Allowed 340
 - CNC 88 HS Optional Diskette Drive 336
 - CNC88HS Optional Diskette Drive- Miscellaneous 338
 - Access from Control 338
 - Requirements 338
 - Specifications 338
 - Diskette Drive Error Codes 340
 - Dynamic Tool Load Compensation 332
 - Servo Coolant Assembly 333
 - Servo Coolant Control 334
 - Troubleshooting Checklist 335
 - M-Function Board Use and Setup 325
 - 1050-3A M-Function PCBA (PCB-0008) - Two M Functions. 327
 - Fadal M Functions 326
 - Fadal Normally Supplied M-Functions 327
 - Fadal Optional M-Functions 327
 - M-Function Contacts 329
 - M-Function Hook-up 329
 - Miscellaneous Functions (M-Codes) 325
 - Reset Options 328
 - U7 (Dip Switch) 328
 - Remote Manual Pulse Generator 330
 - Installation Procedure 331
- Auger 80
 - Chip Removal from the Exit Tube 81
 - Chip Removal from the Machine Interior 81
 - Cleaning and Freeing Chips from the Auger Chip Removal System 80
- Automatic Tool Changers 107
 - Adjustments 114
 - ATC Slide Belt Replacement & Adjustment 119
 - ATC Turret Slide Adjustment 116
 - Spring Configuration 21 & 30 Tool Changers 116
 - Tool Turret Rotational Adjustment 118
 - Z Axis Cold Start Adjustment 114
 - Operation 107
 - ATC Fault Messages 110
 - ATC Sensors & Switch 110
 - ATC Servo Turret Operation 111

- Electrical Operation 107
- Programming 107
- Servo Turret Controller and Amplifier Boards (PCB-0108) 113
- Tool Change Sequence 109

B

- Ball Pockets Incorrect 279
- Belt Drive Systems 265
 - Motor Plate Tensioner Cable 269
 - Posi-Drive Belt System 265

C

- Checking Grounding Integrity of Fadal VMCs 48
 - Inspection 49
 - Specification 48
 - Verification 49
- Chip Removal Devices 447
 - Auger, Chip Removal System 449
 - Daily and Weekly Safety Tests for Door Monitor 452
 - PCB-0197 Auger Control & Door Interlock Monitor Board 1310-0C 449
 - Chip Conveyor 453
 - Cause of Trouble and Corrective Action 458
 - Chip Conveyor Power and Controls 455
 - Installation Procedure 453
 - Maintenance Schedule Chip Conveyor 459
 - Observance and Inspection 457
 - Pre-Startup Safety Inspection 456
 - Restarting the Chip Conveyor 456
 - Stopping the Chip Conveyor on US and CE Machines 456
 - HydroSweep 447
 - Maintenance Schedule 447
- Circuit Breakers 50
- Clamp-on Ammeter Testing 490
 - Ballscrew Alignment 491
 - ExTech AC/DC Clamp-On Ammeter 490
 - Gib and Gib Strap Verification 490
 - Limit Stop Check 491
- CNC Controls 305
 - 1460-1 Memory Expansion Boards 320
 - DC Power Supply 312
 - Door Interlock Monitor Board 2000-1B (PCB-0196 312
 - Indicators (LEDs) 313
 - Inputs 312
 - Operation 312
 - Outputs 312

| | |
|--|-----|
| Power | 312 |
| Terminals | 312 |
| Electrostatic Discharge (ESD) | 306 |
| Emergency Stop Circuit Overview | 313 |
| Axis Controller 1010-6 | 319 |
| Basic Hardware Operation Description | |
| Normal Operation (No Fault) | 313 |
| Basic Software Operational Description | 314 |
| Configurations | 316 |
| Fadal Axis Board Jumper | 316 |
| Fault Condition | 314 |
| Troubleshooting Tips | 315 |
| Fadal's Block Diagram | 305 |
| Feedrate Potentiometer (Pot) Adjustment | 321 |
| Functional Description | 306 |
| Axis Controller Boards | 309 |
| Boards in Motherboard or Backplane | 306 |
| Boards Outside the Motherboard | 311 |
| J14 | 310 |
| Slot 1 to 4 | 306 |
| Slot 10 | 308 |
| Slot 11 | 308 |
| Slot 12 | 308 |
| Slot 13 | 308 |
| Slot 14 | 310 |
| Slot 15 | 311 |
| Slot 16 | 311 |
| Slot 17 | 311 |
| Slot 5 | 307 |
| Slot 6 | 308 |
| Slot 7 | 308 |
| Slot 8 | 308 |
| Slot 9 | 308 |
| Master Feedrate | 320 |
| PCBA Compatibility Chart | 325 |
| Zero Out Memory Procedure | 322 |
| Zero-out Memory | 324 |
| Conduit | 51 |
| Coolant Thru the Spindle | 300 |
| Coolant-Thru Spindle Seal Kit Instructions | 300 |
| Determining the Leak Location | 301 |
| Electrical | 300 |
| Hydraulic Actuator Set-up | 303 |
| Mechanical | 300 |
| Coolant-Thru Drawbar Cylinder | 278 |

D

- Diagnostic System Commands 483
 - DS - Display Switches 483
- Diagnostics 483
- Drawbar Cylinder Bushing 277
- Drawbar Cylinder Plate 277
- Drive Control 6 Pin Molex Connector 240
- Drive Ground 240
- Dual Arm Tool Changer 124
 - Errors 141
 - Installation & Testing 129
 - Operation 137
 - Scheduled Maintenance 150
 - Sensors 139
 - Set-Up 135
 - Software & Mechanical Test 134
 - Sub-Assemblies 125
 - Sys 101.4 Software Update 139
 - Tool Changer Specifications 124
 - Tool Loading Procedures 137
 - Troubleshooting 140

E

- Electrical Grounding 46
 - Primary Grounding 47
- Electrical Service 50
 - Alternate Service 50
 - Circuit Breakers 50
 - Conduit 51
 - Preferred Service 50
 - Wiring 50
- Emergency Error Codes 530
 - Error Numbers From the Axis or Spindle Controller 530
- Error Messages 497
- Exhaust Valve 277
- Exhaust Valve Nipple 277

F

- Fadal Bolt Torque Specifications 32
- Foundation 41
- Fuses, Heaters, Parameters 627
 - FORMAT 633

G

- General Information 461

- Binary Number Groupings 477
- Binary Numbers 475
 - Number Systems 475
- Communications Troubleshooting 463
 - Cables 466
 - Computer and Computer IO Port 467
 - Environment 463
 - File 463
 - Software 468
 - VMC 464
- Fadal Machining Centers Serial Numbers 462
- Helpful Formulas 461
 - Conversion Factors 461
 - Electrical References 461
 - Expansion Coefficients 461
 - Temperature 461
- Reading Status Group 477
- Solving the Thermal Expansion Problem 474
 - Ambient Sources 475
 - Cooling Systems 475
 - General Considerations 474
 - Radiant Heat 475
 - Sunlight 475
- Thermal Expansion 470
 - Accuracy and Repeatability 470
 - Ambient Temperature 472
 - Expansion Coefficients 471
 - Fixtures / Sub Plates 473
 - Friction 471
 - Heat Sources 471
 - Machine Assemblies 473
 - Machining Practices 472
 - Material Differences 473
 - Non-Uniform Expansion 473
 - Overview 470
 - Recognizing Thermal Expansion 470
- VMC Maintenance 478
 - Cabinet Fans 478
 - Conclusion 481
 - Coolant 479
 - Coolant Through Spindle 480
 - Cooled Ball Screws and Spindle 480
 - Glass Scales 480
 - Lubrication 478
 - Machining Practices 478

Monitoring Position Changes 479
Probe 480
Rough Cut / Cool Down / Finish Cut 479
VMC Options 479
Warm Up 478

H

Heidenhain Tester 428
Hold Down Clamps 74
Hydraulic Actuator Assembly Bolts 278
Hydraulic Brakes 367
 4th Axis Brake Check-Out 368
 4th Axis Brake Installation 367
 4th, 5th Axis Brake Check-Out 369
 4th, 5th Axis Brake Installation 368
Hydraulic Hi/low System 270
 7,500 RPM Poly Chain Belt 271
 Spindle Belt Replacement 271
 Filling 270
HydroSweep 447
HydroSweep Only 96
 6-Month Planned Maintenance 97
 Daily Maintenance 96
 Each Part Cycle 96
 Monthly Maintenance 97
 Weekly Maintenance 97

I

Illustrations & Data for All VMC Models 1
 VMC 15/15XT 5
 VMC 2016L 12
 VMC 2216 8
 VMC 3016 10
 VMC 3016L 14
 VMC 3020 26
 VMC 4020 16
 VMC 4020A 18
 VMC 4525 28
 VMC 5020A 20
 VMC 6030 22
 VMC 6535 30
 VMC 8030 24
Input Three Phase Power 240
Installation & Hook-Up 53
 Air Supply 58

- Moving the VMC-Crane 55
- Moving the VMC-Fork Lift 54
- Placing the VMC 56
- Power Check 58
- Unlocking Front Doors with CE Door Locks 53
- Unpacking 53

Installation Procedures 53

Inverter Wye Delta 6 Pin Molex Connector 241

Inverter/Vector Drive Inputs & Outputs 240

- Drive Control 6 Pin Molex Connector 240

- Drive Ground 240

- Input Three Phase Power 240

- Inverter Wye Delta 6 Pin Molex Connector 241

- Load Meter Output 241

- Output Three Phase Power 240

- Vector Drive Encoder 9 pin Molex Connector 242

- Vector Drive with Rigid Tapping 243

Inverter/Vector Drives 239

L

Laser Calibration-Renishaw 84

- Aligning the laser 88

- Axis Calibration 89

- Calibration Requirements and Limits 86

- Definitions 84

- Documentation 85

- Download Survey 89

- Laser Setup 86

- Laser Shut Down 93

- Materials and Equipment 84

- Procedure 84

- Reference Documentation 84

- Responsibilities 84

- Safety and Environmental 84

- Sample output from a laser measurement system. 91

- Scope 84

- Standard Fadal Cnc88hs 85

Leveling 69

- Box Way VMCs 69

- For All VMCs 69

- Linear Way VMCs 70

Load Meter Output 241

M

Machine Maintenance 75

Machine Parameters 632
3 PHASE NO 5% LOW NO 638
5TH AXIS HEAD 644
A-AXIS RATIO 635
AIR VALVE FEEDBACK 645
A-PALLET 644
ASPECT 641
AT SPEED 645
AUTO BRAKE 643
AXES X,Y,Z 634
AXIS DISPLAY 643
BAUD RATE 633
B-AXIS RATIO 636
BINARY BUFFERS 255 640
B-PALLET 644
CMD MENU 640
CRC MODE 639
DEFAULT G0 635
DEFAULT G17 636
DEFAULT G90 635
DEFAULT INCH 638
FORMAT 633
G0 DETAIL 644
GAIN 641
HIGH TORQUE 640
IMM. FIXED CYCLE 637
IPM 642
M60/A-AXIS BRAKE 635
M62/B-AXIS BRAKE 636
M7-FLOOD M8- MIST 638
N-WORDS ORDERED 639
ORIENTATION FACTOR 638
OVERLOAD 642
PALLET 641
PENDANT 634
PU FORMAT 639
RAMP 641
RPM FACTOR 637
SCREW 642
SPINDLE AFTER M6 633
SPINDLE OFF 640
SPINDLE TYPE 637
TIMERS 641
TOOL CHANGER 636
TOOL TABLE 639

- TRAVEL 634
- TURRET FACTOR 640
- VECTOR 643
- XYZ RAMP 642
- Z TAP GAIN 643
- Menu Diagnostics 486
 - Menu Page 1 486
 - Menu Page 2 488
 - Menu Page 3 488
 - Menu Page 4 489
 - Menu Page 5 489
- Moving the VMC-Crane 55
- Moving the VMC-Fork Lift 54

O

- Output Three Phase Power 240
- Oversized Diameter 278

P

- Pallet Changer 431
 - Installation of Light Curtain
 - Mirror Alignment 437
 - Installation of Light curtain 436
 - Installation of Pallet Changer 431
 - Maintenance Schedule 444
 - Operation 439
 - Manual Operation 440
 - M-Functions 439
 - Pallets 439
 - Setting the Sensor on the 1840 Board 438
 - Purpose 438
- Pallet Changer/Hydro Sweep 94
 - Daily Maintenance 94
 - Each Part Cycle 94
 - Monthly Maintenance 95
 - Weekly Maintenance 94
- PCB-0213 Dual Arm ATC Controller Card 167
 - Currents 169
 - Description and Explanation of Operation of PCB-0213 (1330-0A) 167
 - Functional Explanations 169
 - Inputs 167
 - LED Indicators 168
 - Outputs 168
- Phase Converter Rotary 68
- Positioning 44

Preferred Service 50
Pre-Installation Procedures 41
Primary Grounding 47
Probes 371
 MP-11 Probe 371
 MP-12 Probe 372
 TS-27 372
Probes & Scales 371

R

Recommended Mainline Fuses / Circuit Breakers 39
Rigid Tapping 260
 Fadal Rigid Tapping Procedure 260
 Rigid Tap with AC-0017 Software 262
Rotary Tables 341
 4th Axis 341
 Adjusting the Cold Start 351
 Balancing the Amplifier 344
 Connecting the VH-65 Motor Cable 342
 Evaluating the Following Error 345
 FADAL RT-175 360
 FADAL RT-225 361
 FADAL RT-275 362
 FADAL V-300 (V-400) Rotary Table 355
 FADAL VH-65 & VH-5C 354
 Horizontal Installation Difference(s) 343
 Installation 342
 Installing the Servo Control 343
 Maintenance 352
 Pre-installation 341
 Remove the Rotary Table from the Shipping Crate 342
 Rotary Set-Up 353
 Setting Backlash at the Control 345
 Setting the VH-65 Worm Gear Backlash 346
 Setting the VMC Parameters 344
 Setting the Voltage 345
 Squaring the VH-65 342
 Technara MD-200R 357
 Technara MD-300R 358
 Troyke NC-10 356
 Tsudakoma RNCV-401 359
 Verifying Air Brake Engagement 351

S

Scale Box Installation / Side Mount 416

- Scale Box Installation / Top Mount 421
- Scales 373
 - 1580 Board Setup 414
 - Installing Scales 373
- Scheduled Maintenance 75
 - Cooling Fans 78
 - Dual Arm Tool Changer 82
 - Cleaning 82
 - Daily Maintenance 83
 - Grease 82
 - Inspection 83
 - Lubricant 82
 - Miscellaneous Maintenance 83
 - Weekly Maintenance 83
 - Fuses, Heaters, & Relays 80
 - Auger 80
 - Fluids 80
 - Lubrication of the Ways 76
 - Flushing a Contaminated Waylube System 77
 - Waylube System 76
 - Maintenance & Lubrication Schedule 75
 - Daily 75
 - Every 4 months 76
 - Weekly 75
 - Pump Filter 78
 - Spindle & Ballscrew Cooling System 78
 - Tank Reservoir 79
 - Pressure 79
 - Source for Dowfrost 79
- Sequence of Dual Arm-ATC Operation When Used With The Fadal Control 171
 - DA-ATC Tool Change Cycle Fadal Control 172
 - Feedback 171
 - Part Numbers 171
- Service Programs 581
 - TA,2 Programs 581
 - 05801-45 Deg Test 581
 - 05802-X Resolver Test 582
 - 05803-Y Resolver Test 582
 - 05804-Z Resolver Test 582
 - 05805-Work Toolchanger 582
 - 05806-Scrape Z Head 584
 - 05807-X Vibration 584
 - 05808-Y Vibration 585
 - 05809-Z Vibration 585
 - 05810-Orientation 586

05811-Balance Inch 595, Metric 700ipm 302 586
05812-X Balance 680 587
05813-Y Balance 680 587
05814-Z Balance 680 588
05815-A or B 680 Balance 588
05817-Spin Fwd Rev 589
05818-Workout 2216 589
05819-Workout 4020 591
05820-Workout 6030 594
05821- X Calib 2216 596
05822 -Y Calib 2216 597
05823-X Calib 4020 597
05824 — Y Calib 4020 598
05825 — X Calib 6030 598
05826-Y Calib 6030 599
05828-Scrape 6030 Table 600
05829 — Mill 6030 Table 601
05830-Scrape 4020 Table 601
05831-Mill 4020 Table 603
05832-Scrape 2216 Table 603
05833-Mill VMC 2216 604
05834-Scrape 20 Table 605
05835-Test Scales 606
05836-Test Cut 607
05837-Probe Cycle Test 609
05838-Spindle Break In 610
05839-Pallet Changer 611
05840-Mill Pallet Table 614
05842-Engrave Pallet A 615
05843 — Center Bearing Assy. 615
05844-Mill VMC 20 616
05845-Mill VMC 15 617
06000-Rigid Tap Cycle 617
TA,2 Programs 05841-Mill Pallet Slot .687-.689 615
TA,5 Programs 618
6001-Ballbar Test 625
05827-Cycle Test 618
Tool Offsets for the Service Programs 581
Shipping Dimensions 43
Single Phase Input Power 67
Specification -Grounding for the Fadal machine
48
Specifications 1
Spindle Belleville Springs Quantity Chart 285
Spindle Drawbar and Belleville Spring Replacement 283

- Drawbar Removal 283
- Remove Floater (This will rarely be necessary.) 284
- Replace Belleville Springs 284
- Spindle Drive Systems 239
 - Adjustments 244
 - Adjusting the AMC Vector Drive 256
 - Adjusting the Baldor Vector Drives 244
 - Adjustments 257
 - Auto Tuning/ Zero Balance 244
 - Baldor Spindle Drive Parameter Usage for Fadal VMC 245
 - LEDs 256
 - Motor Mag Amps for INV-0070 250
 - Non Rigid Tap Machines 259
 - Pot Adjustments 258
 - Pots 257
 - Regenerative Resistors 254
 - Rigid Tap Machines 259
 - Switch Positions 256
 - Switch Settings 258
 - Terms and Procedures 245
 - Velocity Monitor Output 256
 - Motors 263
 - 10 HP Motor 263
 - 15 HP Motor 263
 - 20 HP Motor 263
 - WYE / DELTA Motors 264
- Spindle Drives 239
- Spindle Duty Cycle 286
- Spindle Pre-Load 286
 - Measuring the Spindle Pre-Load 286
- Spindles 288
 - 15K Air/Oil Spindle 288
 - 7.5K & 10K Grease Packed Spindles 288
 - Adjusting Spindle Tram 293
 - Component Installation 290
 - Control Board Mounting 291
 - Installing Spindle Lubrication Pump 290
 - Pressure Manifold Mounting 291
 - Regulator/ Separation Block Mounting 290
 - Solenoid Modification 291
 - Vacuum Pump Installation 290
 - Spindle Tram 292
 - Spindle/Lube Pump/Control 289
- Supplemental Grounding 47

T

- Table & T-Slot Dimensions 33
 - 15 & 2016L Table 33
 - 15, 15XT, 2216, 3016, 2016L & 3016L T-Slots 34
 - 15XT & 3016L Table 34
 - 2216 & 3016 Table 33
 - 3020, 4525 Table & T-Slots 35
 - 3020, 4525, 6535 T-Slots 38
 - 4020 Table 35
 - 4020, 4020A, 5020A, 6030 & 8030 T-Slots 38
 - 4020A & 5020A Table 36
 - 6030 Table 36
 - 6535 Table 37
 - 8030 Table 37
- Tap-Tap Cycle 282
- Test Cut Procedure 492
- Tests for CE Safeguards on Fadal Machines 98
 - Daily 99
 - Daily & Weekly Safety Tests for CE Safety Circuits 99
 - Door Interlock Monitor (2000-1A) Weekly Test 100
 - Door Interlock Monitor Daily Test for 2000-1A or 1310-0C 99
 - Door Interlock Monitor on Auger Board (1310-0C) Weekly Test 102
 - Door Interlock Monitor Weekly Test for 2000-1 B or -1 C 101
 - Dual Arm Tool Changer (1330) Daily Test 99
 - Dual Arm Tool Changer (1330) Weekly Test 103
 - Front Door Lock Daily Test for 2030-OA 99
 - Front Door Lock Weekly Test for 2030-OA 103
 - Pallet Changer (1100-3A) Daily Test 100
 - Pallet Changer (1100-3A) Weekly Test 104
 - Weekly 100
- Tilting Rotary Tables, 4th & 5th Axis 363
 - A & B Axis Position Loop Gain (1010-5) 365
 - FADAL TR-65 363
- Tools Sticking in the Spindle During a Change Cycle 276
 - 1. Air Supply Pressure 276
 - 10. Orientation Bridge "Lifting" 278
 - 11. Black Oxide Tool Holders 278
 - 12. Dirty Tool Holders 278
 - 13. Spring Pilot 278
 - 14. Spring Pilot 279
 - 15. Drawbar Scored 279
 - 16. Damaged Drawbar 279
 - 17. Damaged Floater 279
 - 18. Testing Procedure 279
 - 2. Drawbar Cylinder Hall Effects Switch 277

- 3. Insufficient Air Volume
 - MAC In-Line Valve 277
- 4. Air Leaks 277
- 5. Air Leaks 277
- 6. Air Leaks 277
- 7. Air Leaks 277
- 8. Air Leaks 278
- 9. Air Leaks 278
- DRB-0024 Sticking Tools Kit, 10K LDB 281
- DRB-0025 Sticking Tools Kit, 10K LDB-CT= 281
- MEASURING DRAWBAR PERFORMANCE 280

Transformer Sensor 68
Transformer Tapping 66
Troubleshooting 497
Troubleshooting Charts 536

U

Unlocking Front Doors with CE Door Locks 53
Unpacking 53

V

Vector Drive Encoder 9 pin Molex Connector 242
Vector Drive with Rigid Tapping 243
Verification - Check grounding integrity with Fluke meter 49
VMC Test Cut 494
Part 495

W

Wiring 50

Z

Zero-Out Memory Procedure 105
Zero-Out Memory Settings 107