
Table of Contents

Table of Contents	i
--------------------------------	---

Specifications	1
-----------------------------	---

Illustrations & Data for All VMC Models	1
VMC TRM	3
VMC EMC	5
VMC 15/15XT	7
VMC 2216	10
VMC 3016	12
VMC 2016L	14
VMC 3016L	16
VMC 4020	18
VMC 4020A	20
VMC 5020A	22
VMC 6030	24
VMC 8030	27
VMC 3020	29
VMC 4525	31
VMC 6535	33
Fadal Bolt Torque Specifications	35
Table & T-Slot Dimensions	36
TRM Table	36
EMC, 15 & 2016L Table	37
2216 & 3016 Table	37
EMC, 15XT & 3016L Table	38
EMC, 15, 15XT, 2216, 3016, 2016L & 3016L T-Slots	38
3020, 4525 Table & T-Slots	39
4020 Table	39
4020A & 5020A Table	40
6030 Table	40
8030 Table	41
6535 Table	41
TRM T-Slots	42
4020, 4020A, 5020A, 6030 & 8030 T-Slots	43
3020, 4525, 6535 T-Slots	43
Recommended Mainline Fuses / Circuit Breakers	44

Pre-Installation Procedures	45
Foundation	45
Shipping Dimensions	47
Positioning	48
Air Supply	49
Electrical Grounding	50
Primary Grounding	51
Supplemental Grounding	51
Checking Grounding Integrity of Fadal VMCs	52
Specification -Grounding for the Fadal machine:	52
Inspection - Check ground wire coming into VMC:	53
Verification - Check grounding integrity with Fluke meter:	53
Electrical Service	54
Installation Procedures	57
Machine Installation & Hook-Up	57
Unpacking	57
Unlocking Front Doors with CE Door Locks	57
Moving the VMC: Fork Lift	58
Moving the VMC: Crane	59
Placing the VMC	60
Air Supply	62
Power Check	62
Transformer Tapping	70
Single Phase Input Power	71
Phase Converter Rotary	72
Transformer Sensor	72
Leveling	73
For All VMCs	73
Box Way VMCs	73
Linear Way VMCs	74
Hold Down Clamps	78
Machine Maintenance	79
Scheduled Maintenance	79
Maintenance & Lubrication Schedule	79
EMC & TRM Lubrication of the ballscrews	80
TRM Lubrication of the Ways	80
Lubrication of the Ways	81
Cooling Fans	82
Spindle & Ballscrew Cooling System	83
Pump Filter	83
Tank Reservoir	83
Fuses, Heaters, & Relays	85

Fluids	85
Auger	85
Dual Arm Tool Changer	87
Scheduled Maintenance	88
for Dual Arm Tool Changer	88
Calibration of VMCs using the Renishaw laser	89
Scope	89
Reference Documentation	89
Materials and Equipment	89
Safety and Environmental	89
Definitions	89
Responsibilities	89
Procedure	89
Standard Fadal Cnc88hs	90
Documentation	90
Calibration Requirements and Limits	91
Laser Setup	91
Aligning the laser	93
Download Survey	94
Axis Calibration	94
Sample output from a laser measurement system.	96
Laser Shut Down	98
Pallet Changer/Hydro Sweep™	99
HydroSweep™ Only	101
Tests for CE Safeguards on Fadal Machines	103
Zero-Out Memory	110
Procedure	110
Zero-Out Memory	112
Settings	112
Automatic Tool Changers	113
Operation	113
Programming	113
Electrical Operation	113
Tool Change Sequence	115
ATC Sensors & Switch	116
ATC Fault Messages	116
Servo Turret Controller and Amplifier Boards (PCB-0108)	119
Adjustments	120
Z Axis Cold Start Adjustment	120
Spring Configuration 16, 21 & 30 Tool Changers	122
ATC Turret Slide Adjustment	122
Tool Turret Rotational Adjustment	124
ATC Slide Belt Replacement & Adjustment	125

ATC Motor Replacement Procedure	126
Replacing the Turret Motor on a Geneva Wheel ATC	126
Replacing the Turret Motor on a Servo Turret ATC	127
Replacing the Slide Motor	127
Turret Factor Setting	128
Pulley Alignment	128
Dual Arm Tool Changer	130
Tool Changer Specifications	130
Sub-Assemblies	131
Installation & Testing	135
Software & Mechanical Test	140
Set-Up	141
Tool Loading Procedures	143
Operation	143
Sys 101.4 Software Update	145
Troubleshooting	146
Errors	147
Scheduled Maintenance	156
50 Taper Dual Arm Tool Changer	157
Tool Changer Specifications	157
Sub-Assemblies	158
Installation	162
Installation Notice	163
Troubleshooting	164
Maintenance	167
Dual Arm Tool Changer - Arm Installation	167
Sending the Tool Changer Spindle to Home Position	167
Inserting the Arm Assembly	168
Dual Arm Tool Changer Alignment	169
Entering the Dual Arm Tool Changer Menu	169
PCB-0213 Dual Arm ATC Controller Card	173
Description and Explanation of Operation of PCB-0213 (1330-0A)	173
Inputs	173
Outputs	174
LED Indicators	174
Currents	175
Functional Explanations	175
Sequence of Dual Arm-ATC Operation When Used With The Fadal Control	177
Feedback	177
Part Numbers	177
DA-ATC Tool Change Cycle—Fadal Control	178
Changing tools on a TRM	183
50 Taper Pull Stud Specs (CAT/BT)	184

Axis Drive Systems 185

Axis Drive Systems	185
Amplifier Chassis Operation	185
Troubleshooting the Amplifier Chassis	186
Solid State Relay	186
Bridge Rectifier	186
AC Brushless Chassis Diagram	188
Amplifiers	190
DC Axis Drive Systems	191
Note:	191
DC Amplifier Adjustment	191
Axis Software Version AC0017-5 for AC Drive VMCs	192
Procedure for Setting Loop Gain	192
Setting Cold Start Position	194
Replacing A Servo Amplifier	194
Setting Gain For The 1010-5	195
Verify The Gain Setting In The SV	195
Troubleshooting DC Amplifiers	196
AC Drive Systems	196
Information and Connections	196
Physical Layout	197
Amplifier Power Connectors	199
Features	201
AC Axis Adjustments	201
Axis Card Adjustments	202
Troubleshooting AC Amplifiers	203
SV Command	203
Using SV	203
Review or Change Survey	204
Determining the Zero Offset	204
Changing the Zero Offset	205
Changing Gain	206
Saving a Survey to the Axis Control Card	206
Copying a Survey To A New Axis Control Card	206
Axis Motors (XYZ)	207
Motor Wiring	207
Resolvers	208
EMC and TRM Way Lubrication	210
Axis & Way Systems	211
Waylube System	211
Operation	211
PDI Waylube Troubleshooting Observations and Tests	212
Air Valve Operation	212
Pump Operation	213

Waylube Pump	214
Cool Power – Ballscrew / Spindle Cooling System	217
Electrical Operation	217
Older Controller Boards	219
Coolant flow paths	219
Motor Couplers	221
Gib Adjustment	224
Table Gib/Strap Assembly	226
Saddle Gibs	227
Saddle Gib/Strap Assembly	228
Head Gibs	229
Head Gib/Strap Assembly	230
Top Gibs	230
Bottom Gibs	231
6535/4525/3020 Gib & Strap Adjustments	232
Table Gibs	233
Table Gib/Strap Assembly	234
Saddle Gibs	234
Head Gibs	237
Head Gib/Strap	238
Top Gib/Strap	238
Bottom Gib/Strap	238
SQUARENESS TEST: (Measures Squareness from X to Y)	239
Installing VMC Linear Way Saddle	240
Procedure for Correcting the Saddle Squareness	241
Procedure for Correcting the Table Squareness	241
Axis Limit Stops	242
TRM & EMC	242
Mechanical	242
Backlash	243
Entering Backlash Values	244
Determining Proper Backlash Values	244
CNC Controls	247
Fadal's Block Diagram	247
Electrostatic Discharge (ESD)	248
Functional Description	248
Boards in Motherboard or Backplane	248
Slot 1 to 4	248
Slot 5	249
Slot 6	250
Slot 7	250
Slot 8	250
Slot 9	250

Slot 10	250
Slot 11	250
Slot 12	250
Slot 13	250
Axis Controller Boards	251
J14	252
Slot 14	252
Slot 15	253
Slot 16	253
Slot 17	253
Boards Outside the Motherboard	253
DC Power Supply	254
Door Interlock Monitor Board 2000-1B (PCB-0196)	254
Terminals	254
Inputs	254
Outputs	254
Power	254
Operation	254
Indicators (LEDs)	255
Emergency Stop Circuit Overview	255
Basic Hardware Operation Description: Normal Operation (No Fault)	255
Fault Condition	256
Basic Software Operational Description	256
Troubleshooting Tips	257
Emergency Stop and Fault Circuit	258
Emergency Stop Circuitry	259
Fadal Axis Board Jumper	260
Axis Controller 1010-6	261
1460-1 Memory Expansion Boards	262
Master Feedrate	262
Feedrate Potentiometer (Pot) Adjustment	263
Zero Out Memory Procedure	264
Zero-out Memory	266
PCBA Compatibility Chart	267
 Spindle Drive Systems	 269
Spindle Drives	269
Inverter/Vector Drives	269
Inverter/Vector Drive Inputs & Outputs	270
Adjustments	274
Adjusting the Baldor Vector Drives	274
Auto Tuning/ Zero Balance	274
Baldor Spindle Drive Parameter Usage for Fadal VMC	275
Terms and Procedures:	275

Yaskawa Drive 515 (INV-0072)	282
Set up Instruction, Initializing and balancing the drives	282
Yaskawa V7 (INV-0071) on Fadal EMC Spindle setup Instructions	283
Setting Access level for parameters	283
Displaying Fault Sequence	283
Adjusting zero point on Analog velocity input	283
Regenerative Resistors	284
Adjusting the AMC Vector Drive	286
Rigid Tapping (Optional Feature)	291
Fadal Rigid Tapping Procedure	291
Software Version AC-0017 and Later	292
Before AC-0017 Software Version	293
Motors	294
7.5 HP Motor	294
10 HP Motor	294
15 HP Motor	294
20 HP Motor	294
35 HP Motor	294
(50 HP Drive)	294
WYE / DELTA Motors	295
Belt Drive Systems	296
Posi-Drive Belt System	296
Motor Plate Tensioner Cable	300
Hydraulic Hi/low System	301
7,500 RPM Poly Chain Belt	302
Tools Sticking in the Spindle During a Change Cycle	307
1. Air Supply Pressure	307
2. Drawbar Cylinder Hall Effects Switch	308
3. Insufficient Air Volume: MAC In-Line Valve	308
4. Air Leaks; Exhaust Valve	308
5. Air Leaks; Exhaust Valve Nipple	308
6. Air Leaks; Drawbar Cylinder Bushing	308
7. Air Leaks; Drawbar Cylinder Plate	308
8. Air Leaks; Hydraulic Actuator Assembly Bolts	309
9. Air Leaks; Coolant-Thru Drawbar Cylinder	309
10. Orientation Bridge "Lifting"	309
11. Black Oxide Tool Holders	309
12. Dirty Tool Holders	309
13. Spring Pilot; Oversized Diameter	309
14. Spring Pilot; Ball Pockets Incorrect	310
15. Drawbar Scored	310
16. Damaged Drawbar	310
17. Damaged Floater	310
18. Testing Procedure	310
MEASURING DRAWBAR PERFORMANCE	311

DRB-0024 Sticking Tools Kit, 10K LDB	312
DRB-0025 Sticking Tools Kit, 10K LDB-CT=	312
Tap-Tap Cycle	313
Spindle Drawbar and Belleville Spring Replacement	314
Drawbar Removal	314
Replace Belleville Springs	315
Remove Floater (This will rarely be necessary.)	315
Spindle Belleville Springs Quantity Chart	316
Spindle Pre-Load	317
Measuring the Spindle Pre-Load	317
Spindle Duty Cycle	317
Air Positive Flow System	318
Spindles	319
7.5K & 10K Grease Packed Spindles	319
15K Air/Oil Spindle	319
Spindle/Lube Pump/Control	320
Component Installation	321
Spindle Tram	323
Adjusting Spindle Tram	324
15K Air/Oil Spindle Installation	324
Wiring Harness Installation	326
Plumbing Spindle	327
Install Component Plumbing	328
Coolant Thru the Spindle	331
Electrical	331
Mechanical	331
Coolant-Thru Spindle Seal Kit Instructions	331
Determining the Leak Location	332
Hydraulic Actuator Set-up	334
40 Taper BT & CAT Pull Studs	335
 Attached Optional Devices	 337
M-Function Board Use and Setup	337
Miscellaneous Functions (M-Codes)	337
Fadal M Functions	338
Fadal Normally Supplied M-Functions	339
Fadal Optional M-Functions	339
1050-3A M-Function PCBA (PCB-0008) - Two M Functions.	339
U7 (Dip Switch)	340
Reset Options	340
M-Function Contacts	341
M-Function Hook-up	341
Remote Manual Pulse Generator	342
Installation Procedure	343

Dynamic Tool Load Compensation	344
Servo Coolant Assembly	345
Servo Coolant Control	346
Troubleshooting Checklist	347
CNC 88 HS Optional Diskette Drive	348
CNC88HS Optional Diskette Drive- Miscellaneous	350
Specifications	350
Requirements	350
Access from Control	350
Access from Program Using Macro Statement #DISK	351
Macro Statement Format	351
Restrictions on File Content and Format	351
Restrictions on User Defined Subroutines	352
Subprograms and Fixed Subroutines ARE Allowed	352
Diskette Drive Error Codes	352
Rotary Tables	353
Rotary Tables, 4th Axis	353
Pre-installation	353
Remove the Rotary Table from the Shipping Crate:	354
Installation	354
Squaring the	354
VH-65	354
Connecting the VH-65 Motor Cable	354
Horizontal Installation Difference(s)	355
Installing the Servo Control	355
Setting the VMC Parameters	356
Balancing the Amplifier	356
Evaluating the Following Error	357
Setting the Voltage	357
Setting Backlash at the Control	357
Setting the VH-65 Worm Gear Backlash	358
Verifying Air Brake Engagement	363
Adjusting the Cold Start	363
Maintenance	364
Rotary Set-Up	365
FADAL VH-65 & VH-5C	366
FADAL V-300 (V-400) Rotary Table	367
Troyke NC-10	368
Technara MD-200R	369
Technara MD-300R	370
Tsudakoma RNCV-401	371
FADAL RT-175	372
FADAL RT-225	373

FADAL RT-275	374
Tilting Rotary Tables, 4th & 5th Axis	375
FADAL TR-65	375
A & B Axis Position Loop Gain (1010-5)	377
Hydraulic Brakes	379
4th Axis Brake Installation	379
4th Axis Brake Check-Out	380
4th, 5th Axis Brake Installation	380
4th, 5th Axis Brake Check-Out	381
Probes & Scales	383
Probes	383
MP-11 Probe	383
MP-12 Probe	384
TS-27	384
Scales	385
Installing Scales	385
1580 Board Setup	426
Scale Box Installation / Side Mount	428
Scale Box Installation / Top Mount	433
Heidenhain Tester	440
Pallet Changer	443
Installation of Pallet Changer	443
Installation of Light Curtain	448
Mirror Alignment	449
Setting the Sensor on the 1840 Board	450
Purpose	450
Operation	451
Pallets	451
M-Functions	451
Manual Operation	452
Maintenance Schedule	456
Chip Removal Devices	459
HydroSweep™	459
Maintenance Schedule	459
Auger, Chip Removal System	461
PCB-0197 Auger Control & Door Interlock Monitor Board 1310-OC	461
Daily and Weekly Safety Tests for Door Monitor	464
Chip Conveyor	465
Installation Procedure	465
Chip Conveyor Power and Controls	467

Pre-Startup Safety Inspection	468
Stopping the Chip Conveyor on US and CE Machines	468
Restarting the Chip Conveyor	468
Observance and Inspection	469
Cause of Trouble and Corrective Action	470
Maintenance Schedule Chip Conveyor	471
General Information	473
Helpful Formulas	473
Temperature	473
Conversion Factors	473
Electrical References	473
Expansion Coefficients	473
Fadal Machining Centers Serial Numbers	474
Communications Troubleshooting	475
Environment	475
File	475
VMC	476
Cables	478
Computer and Computer IO Port	479
Software	480
Thermal Expansion	482
Overview	482
Recognizing Thermal Expansion	482
Accuracy and Repeatability	482
Expansion Coefficients	483
Heat Sources	483
Friction	483
Ambient Temperature	484
Machining Practices	484
Non-Uniform Expansion	485
Material Differences	485
Fixtures / Sub Plates	485
Machine Assemblies	485
Solving the Thermal Expansion Problem	486
General Considerations	486
Ambient Sources	487
Sunlight	487
Cooling Systems	487
Radiant Heat	487
Binary Numbers	487
Number Systems	487
Binary Number Groupings	489
Reading Status Group	489

VMC Maintenance	490
Cabinet Fans	490
Lubrication	490
Machining Practices	490
Warm Up	490
Rough Cut / Cool Down / Finish Cut	491
Monitoring Position Changes	491
Coolant	491
VMC Options	491
Probe	492
Glass Scales	492
Coolant Through Spindle	492
Cooled Ball Screws and Spindle	492
Conclusion	493
 Diagnostics	 495
Diagnostic System Commands	495
DS - Display Switches	495
Menu Diagnostics	498
Menu Page 1	498
Menu Page 2	500
Menu Page 3	500
Menu Page 4	501
Menu Page 5	501
Clamp-on Ammeter Testing	502
Tooling Required: ExTech AC/DC Clamp-On Ammeter	502
Gib and Gib Strap Verification	502
Ballscrew Alignment	503
Limit Stop Check	503
Test Cut Procedure	504
VMC Test Cut	506
VMC Test Cut Part	507
 Troubleshooting	 509
Error Messages	509
Emergency Error Codes	542
Error Numbers From the Axis or Spindle Controller	542
Troubleshooting Checklist RS-232 Communications	545
If no communications occur:	545
Troubleshooting Charts	548
 Service Programs.....	 593
Tool Offsets for the Service Programs.....	593

TA,2 Programs	593
05801-45 Deg Test	593
05802-X Resolver Test	594
05803-Y Resolver Test	594
05804-Z Resolver Test	594
05805-Work Toolchanger	594
05806-Scrape Z Head	596
05807-X Vibration	596
05808-Y Vibration	597
05809-Z Vibration	597
05810-Orientation	598
05811-Balance Inch: 595, Metric 700ipm: 302	598
05812-X Balance 680	599
05813-Y Balance 680	599
05814-Z Balance 680	600
05815-A or B 680 Balance	600
05817-Spin Fwd Rev	601
05818-Workout 2216	601
05819-Workout 4020	603
05820-Workout 6030	606
05821- X Calib 2216	608
05822 -Y Calib 2216	609
05823-X Calib 4020	609
05824 — Y Calib 4020	610
05825 — X Calib 6030	610
05826-Y Calib 6030	611
05828-Scrape 6030 Table	612
05829 — Mill 6030 Table	613
05830-Scrape 4020 Table	613
05831-Mill 4020 Table	615
05832-Scrape 2216 Table	615
05833-Mill VMC 2216	616
05834-Scrape 20 Table	617
05835-Test Scales	618
05836-Test Cut	619
05837-Probe Cycle Test	621
05838-Spindle Break In	622
05839-Pallet Changer	623
05840-Mill Pallet Table	626
05841-Mill Pallet Slot .687-.689	627
05842-Engrave Pallet A	627
05843 — Center Bearing Assy.	627
05844-Mill VMC 20	628
05845-Mill VMC 15	629
06000-Rigid Tap Cycle	629

TA,5 Programs	630
05827-Cycle Test	630
6001-Ballbar Test	637
Fuses, Heaters, Parameters	639
Machine Parameters	645
Machine Parameters: Page One	646
FORMAT	646
BAUD RATE	646
SPINDLE AFTER M6	646
AXES: X,Y,Z	647
TRAVEL	647
PENDANT.....	647
DEFAULT: G0	648
A-AXIS RATIO	648
M60/A-AXIS BRAKE	648
DEFAULT: G90	648
B-AXIS RATIO	649
M62/B-AXIS BRAKE	649
DEFAULT: G17	649
TOOL CHANGER	649
IMM. FIXED CYCLE	650
RPM FACTOR	650
SPINDLE TYPE	650
ORIENTATION FACTOR	651
Machine Parameters: Page Two	651
DEFAULT: INCH	651
M7-FLOOD M8-MIST	651
3 PHASE NO 5% LOW: NO	651
PU FORMAT	652
N-WORDS ORDERED	652
TOOL TABLE	652
CRC MODE	652
BINARY BUFFERS: 255	653
HIGH TORQUE	653
SPINDLE OFF	653
TURRET FACTOR	653
CMD MENU	653
PALLET	654
GAIN	654
RAMP	654
ASPECT	654
TIMERS	654
OVERLOAD	655
Machine Parameters: Page Three	655

SCREW	655
IPM	655
XYZ RAMP	655
Z TAP GAIN	656
VECTOR	656
AXIS DISPLAY	656
AUTO BRAKE	656
A-PALLET	657
B-PALLET	657
5TH AXIS HEAD	657
GO DETAIL	657
AIR VALVE FEEDBACK	658
AT SPEED	658
SLIDE HOLD	658
MANUAL	658
Typical TRM Parameters	659
15" (SHARP) LCD display	659
INDEX	661