
Table of Contents

Power On/Off	3
Pre-Startup Checks	3
Power On for System 97/99	4
Automatic Cold Start.....	5
Wrong Power Off Procedure	6
Auto Startup Program.....	7
Power Off Procedure.....	9
 Pendant.....	 11
Video ON/OFF Switch.....	11
Optional Stop Switch	11
Block Skip Switch	11
Keylock.....	12
Alternate NOEDIT Feature.....	13
Positioning Read Out Display	13
How to Display the Position Read-out:.....	14
Axis Load Display.....	14
Manual Data Input Display.....	15
Large Format Display.....	15
Modes	15
Quick Keys Menu	16
Edit Menu.....	16
Functions Menu	16
Using the Command Mode	16
Cursor in the Command Mode	17
Using the Delete Key	18
Using the Menu Mode	19
 Jog Mode.....	 21
Jog Using the Manual Pulse Generator.....	21
Jog Using the Keyboard.....	22
Jog Using the Remote Manual Pulse Generator	22
Jog Using the Vector Jog for 5 Axis Head.....	23
Single Step, Jog Away From.....	24
Slide Hold, Jog Away From	25
Waiting Stage, Jog Away From	26

Run Mode.....	29
Auto, Running a Program	29
Waiting.....	30
Changing Modes	30
Manual Pulse Dry Run	31
Dry Run.....	32
Single Step	33
Slide Hold.....	34
Mid-Tape (Program) Start	34
Emergency Stop.....	37
Emergency Stop	37
Formats.....	39
Formats	39
Changing Parameters.....	40
Saving Parameters	40
FORMAT 1 Parameter Settings	41
FORMAT 2 Parameter Settings	42
FORMAT 1 Program Example #1	43
FORMAT 1 Program Example #2	44
Notes on FORMAT 1 Style Programming:.....	46
FORMAT 2 Program Example	47
Notes on FORMAT 2 Style Programming:.....	49
Viewing the Software ID Number.....	50
Spindle 53	
Manual Operations	53
Spindle, RPM Established from MDI	54
Using the Spindle ON/OFF Button	55
Spindle, Loading a Holder from the ATC	55
Spindle, Unorient to Turn by Hand	55
Spindle, Orient	56
Spindle Reversed While Using Jog	57
Tool Changer.....	59
Turret (ATC), Open for Loading; Using the TC,1 Command.....	59
Tool Changer Crash	59
Turret Loading, Putting Tools in the Tool Changer	60
Turret (ATC), Establish Tool Order; Using the SETTO Command.....	61
Coolant 63	
Using the Coolant 1 and Coolant 2 Buttons	63
Coolant-Through Spindle	63

Commands	65
Command Use Summary	66
Viewing Error Messages	68
AU COMMAND	68
BL COMMAND	69
CD COMMAND	71
CH COMMAND	72
CO COMMAND	75
CS COMMAND	75
DE COMMAND	76
DNC COMMAND	76
Direct Numerical Control, Using a Server Program	77
FO COMMAND	78
Viewing the Fixture Offset Table	80
Changing the Fixture Offset Information	81
IN COMMAND	81
LE COMMAND.....	83
LI COMMAND	85
MD COMMAND	86
ME COMMAND.....	87
NE COMMAND	87
NU COMMAND.....	88
PA COMMAND	88
Program Editing Using PA	88
Background Edit	89
To List The Program	90
To Insert Between Lines	90
To Search The Program	91
To Change a Line	92
To Delete a Line	92
To Run a Single Line From the Program	92
To do a Direct Mid-Program Start	93
PR COMMAND	93
To Use the Program Library Menu:	94
RI COMMAND	95
USING THE SETTO COMMAND	96
SETP COMMAND.....	96
CS COMMAND	97
Establishing part home using an edge finder:.....	97
Establishing part home using an indicator:	98
SETH COMMAND	99
SL COMMAND	99
Tool Length Offsets, Purpose and Use in Program	101
SP COMMAND	102
SU COMMAND	102

TA COMMAND	105
Adding a Program to the End of the Program in Memory	107
Output, to Tape Punch or Computer	107
TC,1 COMMAND	108
Tool Changer Crash	108
Turret Loading, Putting Tools in the Tool Changer	109
TO COMMAND	110
UT COMMAND.....	110
VT COMMAND	113
CNC 88HS GRAPHICS MENU	113
Plotting Options.....	114
Index.....	117

Operator Manual

Fadal

This reference covers the following Vertical Machining Centers:

VMC-15
VMC-15XT
VMC-2016L
VMC-2216
VMC-2216HT
VMC-3016
VMC-3016L
VMC-3016HT
VMC-3020
VMC-4020
VMC-4020HT
VMC-4020A
VMC-4525
VMC-5020A
VMC-6030
VMC-8030



© Copyright 2001 Fadal Machining Centers.
All rights reserved.