

---



---

# Index

---



---

**A**

Alternate NOEDIT Feature.....	13
AU COMMAND .....	68
Using the AU Command.....	68
Auto Startup Program.....	7
Automatic Cold Start.....	5
Last Home Position .....	5
Axis Load Display.....	14

**B**

Backlash.....	69
BL COMMAND .....	69
Using .....	69
Block Skip Switch.....	11

**C**

CD COMMAND.....	71
Setting Baud Rate Using the CD.....	71
CH COMMAND.....	72
Change Program Lines .....	72
CNC 88HS GRAPHICS MENU .....	113
CO COMMAND.....	75
Copy Program Blocks .....	75
Cold Start.....	75
Commands .....	65
AU COMMAND.....	68
Using .....	68
BL COMMAND .....	69
Using .....	69
CD COMMAND.....	71
Setting Baud Rate.....	71
CH COMMAND.....	72
Change Program Lines .....	72
CO COMMAND .....	75
Copy Program Blocks.....	75
CS COMMAND.....	75, 97
Cold Start .....	75
Establish Position .....	97
Establishing Part Home .....	97

Using Edge Finder .....	97
Using Indicator .....	98
DE COMMAND .....	76
Delete Program Lines .....	76
DNC COMMAND .....	76
Direct Numerical Control .....	76
Using a Server Program .....	77
FO COMMAND .....	78
Changing the Fixture Offset Information .....	81
Viewing the Fixture Offset Table .....	80
IN COMMAND .....	81
Insert Program Lines .....	81
LE COMMAND .....	83
Learn Mode .....	83
LI COMMAND .....	85
List Program .....	85
MD COMMAND .....	86
Manual Data Input .....	86
ME COMMAND .....	87
Memory Free .....	87
NE COMMAND .....	87
Memory Clear .....	87
NU COMMAND .....	88
Number Program Lines .....	88
PA COMMAND .....	88
Uses .....	88
Background Edit .....	89
Change a Line .....	92
Delete a Line .....	92
Direct Mid-Program Start .....	93
Insert Between Lines .....	90
List The Program .....	90
Program Editing .....	88
Decimals and Signs .....	88
Run a Single Line From the Program .....	92
Search The Program .....	91
PR COMMAND .....	93
Program Library .....	93
Program Library Menu .....	94
RI COMMAND .....	95
Memory Clear .....	95
SETH COMMAND .....	99
Home Position Correction .....	99
SETP COMMAND .....	96
Using .....	96

SETTO COMMAND .....	96
Establish Tool Order .....	96
SL COMMAND .....	99
Setting .....	101
Tool Length Offset .....	101
Purpose and Use in Program .....	101
Tool Length Offset .....	99
Setting .....	99
SP COMMAND .....	102
Save Parameters .....	102
SU COMMAND .....	102
Sum Program .....	102
TA COMMAND .....	105
Adding a Program to the End of the Program in Memory .....	107
Input from a Tape Punch or Computer .....	105
Output to Tape Punch or Computer .....	107
TC,1 COMMAND .....	108
Tool Changer Crash .....	108
Turret Loading .....	109
Turret Open for Loading .....	108
TO COMMAND .....	110
Tool Diameter Input .....	110
View the Tool Table .....	110
Use Summary .....	66
UT COMMAND .....	110
Clear the Tool Table .....	111
Establish Tool Order .....	111
Setting Tool Length Offsets .....	110
Utility Option .....	110
Viewing Error Messages .....	68
VT COMMAND .....	113
Verify Punched Tape .....	113
Coolant .....	63
Coolant 1 and Coolant 2 Buttons .....	63
Through Spindle .....	63
CS COMMAND .....	75
Cold Start .....	75
Establish Position .....	97
Establishing Part Home .....	97
Using an Indicator .....	98
<b>D</b>	
DE COMMAND .....	76
Delete Program Lines .....	76
Delete Key .....	18

Using .....	18
Direct Numerical Control .....	76
DNC COMMAND .....	76
Direct Numerical Control.....	76
<b>E</b>	
edge finder .....	97
Edit Menu .....	16
Emergency Stop .....	37
<b>F</b>	
Fixture Offsets.....	78
FO COMMAND.....	78
Changing the Fixture Offset Information.....	81
Fixture Offsets.....	78
Viewing the Fixture Offset Table.....	80
Formats .....	39
Changing Parameters .....	40
Parameter Settings.....	41
Format 1 .....	41
Format 2.....	42
Saving Parameters .....	40
Style Programming.....	46
Format 1 .....	46
Format 2.....	49
Functions Menu.....	16
<b>I</b>	
IN COMMAND .....	81
Insert Program Lines.....	81
indicator .....	98
<b>J</b>	
Jog Mode .....	21
Keyboard .....	22
Manual Pulse Generator .....	21
Remote Manual Pulse Generator.....	22
Single Step.....	24
Slide Hold.....	25
Vector Jog for 5 Axis Head .....	23
Waiting Stage .....	26
<b>K</b>	
Keylock .....	12

**L**

Large Format Display.....	15
LE COMMAND.....	83
Learn Mode.....	83
learn mode.....	83
LI COMMAND .....	85
List Program .....	85

**M**

Manual Cold Start.....	5
Manual Data Input.....	86
Manual Data Input Display.....	15
MD COMMAND .....	86
Manual Data Input .....	86
ME COMMAND.....	87
Memory Free .....	87
Memory Clear .....	87, 95
Memory Free .....	87
Modes .....	15
Command Mode .....	15
Cursor.....	17
MANUAL Key .....	17
Using .....	16
List Mode.....	15
Menu Mode.....	19
Using .....	19

**N**

NE COMMAND .....	87
Memory Clear .....	87
NU COMMAND.....	88
Number Program Lines.....	88

**O**

Optional Stop Switch .....	11
----------------------------	----

**P**

PA COMMAND .....	88
Background Edit .....	89
Change a Line .....	92
Direct Mid-Program Start .....	93
Insert Between Lines .....	90
List The Program .....	90
Program Editing.....	88
Run a Single Line From the Program .....	92
Search The Program .....	91

Uses .....	88
physical limits .....	6
Plotting Options .....	114
AUTO .....	114
CLEAR .....	114
FULL TABLE .....	114
OPTIONS PLOTTING .....	114
SINGLE STEP .....	115
TOGGLE DISPLAY MODE .....	114
VIEW TOP OR ISOMETRIC .....	115
ZOOM .....	115
Positioning Read Out Display .....	13
How To .....	14
Power Off .....	9
battery backed memory board .....	9
Power On .....	4
PR COMMAND .....	93
Program Library Menu .....	94
Pre-Startup Checks .....	3
Air Pressure Gauges .....	3
Coolant Level .....	3
Oil Levels .....	3
Power on the VMC .....	4
Spindle Cooler Reservoir .....	4
program library .....	93
<b>Q</b>	
Quick Keys Menu .....	16
<b>R</b>	
RI COMMAND .....	95
Memory Clear .....	95
Run Mode .....	29
Auto Running a Program .....	29
Changing Modes .....	30
Dry Run .....	32
Manual Pulse Dry Run .....	31
Mid-Tape Start .....	34
Single Step .....	33
Slide Hold .....	34
Waiting .....	30
<b>S</b>	
SETH COMMAND .....	99
Home Position Correction .....	99
SETP COMMAND .....	96

Using .....	96
SETTO COMMAND .....	96
Establish Tool Order .....	96
SL COMMAND .....	99
Setting .....	99
Tool Length Offset .....	101
Purpose and Use in Program .....	101
Tool Length Offset .....	99
Setting .....	99
Software ID Number .....	50
Viewing .....	50
SP COMMAND .....	102
Save Parameters .....	102
Spindle .....	53
Loading a Holder from the ATC .....	55
Manual Operations .....	53
ON/OFF Button .....	55
Orient .....	56
Reversed While Using Jog .....	57
RPM Established from MDI .....	54
Unorient to Turn by Hand .....	55
SU COMMAND .....	102
Sum Program .....	102
<b>T</b>	
TA COMMAND .....	105
Adding a Program to the End of the Program in Memory .....	107
Input from a Tape Punch or Computer .....	105
Output to Tape Punch or Computer .....	107
TC,1 COMMAND .....	108
Tool Changer Crash .....	108
Turret Loading .....	109
Turret Open for Loading .....	108
TO COMMAND .....	110
Tool Diameter Input .....	110
View the Tool Table .....	110
Tool Changer .....	59
Crash .....	59
Establish Tool Order .....	61
Open for Loading .....	59
Turret Loading .....	60
Using the SETTO Command .....	61
Tool Changer Crash .....	108
Tool Diameter Input .....	110

**U**

UT COMMAND .....	110
Clear the Tool Table .....	111
Utility Option .....	110

**V**

Video ON/OFF Switch .....	11
VT COMMAND .....	113
Verify Punched Tape .....	113

**W**

Wrong Power Off .....	6
Last Home Position .....	7
last home position .....	7